

PULSAR

CAL. 5Y67


RETROGRADE DAY INDICATOR

- Time indicates by the hour, minute and second hands
- Date indicates by the date hand
- Day of the week indicates by the day hand
- The 24-hour hand indicates the hour in the 24-hour indication

ENGLISH

DISPLAY AND CROWN

English

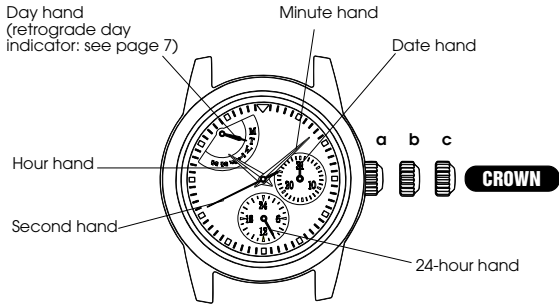

a. Normal position

b. First click

c. Second click

**Orientation of the retrograde display may vary depending on the model.*

SCREW DOWN CROWN

[for models with screw down crown]

- 1 Turn Crown counterclockwise until you no longer feel the threads turning.
- 2 Crown can be pulled out.



Locking the crown


- 1 Push Crown back in to normal position.
- 2 Turn Crown clockwise while pressing it lightly until tight.



DAY AND TIME SETTING

English


Day hand

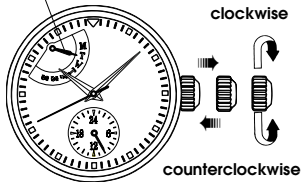

CROWN

- 1 Pull out to second click when Second hand is at the 12 o'clock position.
- 2 Turn clockwise to advance Hour and Minute hands until Day hand is set to the desired day of the week.
- 3 Turn to set the time.
- 4 Push the crown back into the normal position in accordance with a time signal.

DATE SETTING

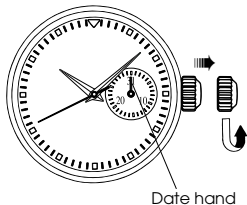

CROWN

- 1 Pull out to first click.
- 2 Turn counterclockwise to set Date hand to the desired date.
- 3 Push in.

NOTES ON OPERATING THE WATCH

TIME/DATE SETTING

- To advance the day hand quickly, turn back the hour and minute hands 4 to 5 hours beyond the point the day changes (between 11:00 p.m. and 4:00 a.m.), and then advance them again until the day hand is set to the next.
**The day hand will not move back by turning the crown counterclockwise.*
- After the day hand reaches the last day of the week, turn the crown clockwise and the hand will return to the first day of the week (retrograde day indicator).
- When adjusting the day hand, turn the crown slowly.
- The 24-hour hand moves correspondingly with the hour hand.
- When setting the hour hand, check that the 24-hour hand is correctly set.
- When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

DATE SETTING

- Do not set the date hand between 9:00 p.m. and 1:00 a.m. Otherwise, it may not turn properly.
- While setting the date hand, check that it moves properly in one-day increments.
- It is necessary to adjust the date on the first day after a 30-day month and February.